

Depending on your receiver there are different ways to set up limits.

R15s/16s receivers: Hide Adult channel titles

1. Press **Menu**.
2. Select "Parental, Fav's, & Setup."
3. Select "Parental Controls."
4. Select "Edit Settings."
5. Select "Adult Channels."
6. Enter passcode.
7. Use the **Select** button to toggle "Show Adult/Hide Adult."
8. Arrow **Left** and select "Done."

Rating Limit – SD

1. Press **Menu**.
2. Select "Parental, Fav's, & Setup."
3. Select "Parental Controls."

4. Select "Edit Settings."
5. Select "Ratings Limits."
6. Select a category - Movies, TV, or Other.
7. Press **Select** on the highest rating to be allowed.
8. Arrow **Left** twice and select "Done."

H21s+ and HR2x/R22s+: Hide Adult channel titles

1. Press **Info**.
2. Select "Parental." (Use the **Right/Left** arrows to navigate list.)
3. Select "Parental Controls." (Use the **Up/Down** arrows to navigate list.)
4. Select "Adult Channels."
5. Enter passcode.
6. Use the **Select** button to toggle "Show Adult/Hide Adult."
7. Arrow **Left** and select "Done."

Rating Limit – HD

1. Press **Info**.
2. Select "Parental." (Use the **Right/Left** arrows to navigate list.)
3. Select "Parental Controls." (Use the **Up/Down** arrows to navigate list.)
4. Select "Ratings Limits."
5. Select a category - Movies, TV, or Other.
6. Press **Select** on the highest rating to be allowed.
7. Arrow **Left** twice and select "Done."

If you have trouble with the steps above or are still viewing inappropriate content on the guide, please contact us directly by emailing schoolaccounts@directv.com.